


## REMOVAL


### 1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

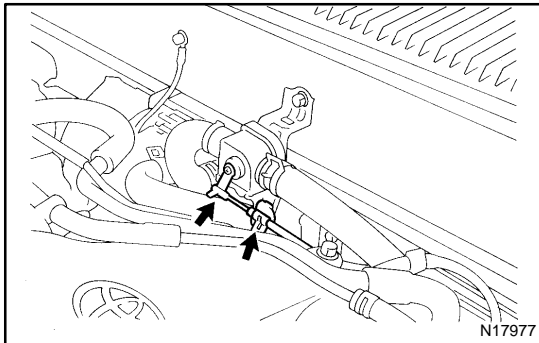


### 2. DISCONNECT WATER VALVE CONTROL CABLE FROM WATER VALVE

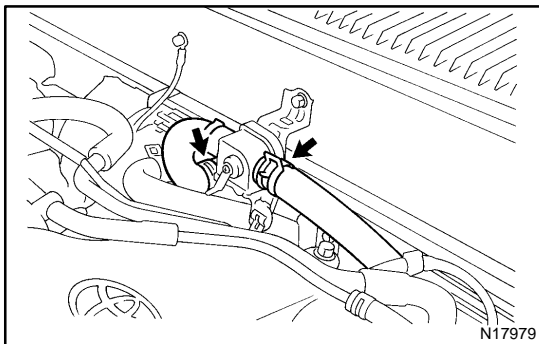

### 3. DISCONNECT WATER HOSES

- Using pliers, grip the claws of the hose clip and slide the hose clip along the hose.
- Disconnect the water hose.

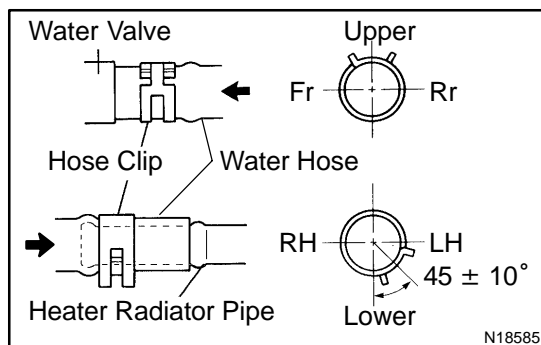

HINT:

At the time of installation, please refer to the following item.

- Heater radiator pipe:  
Push the water hose onto the heater radiator pipe as far as second ridge on the pipe.
- Water valve:  
Push the water hose onto the water valve pipe as far as water valve.
- Install the hose clip in a position, as shown in the illustration.

### 4. REMOVE WATER VALVE

Remove the bolt and water valve.

