



ATF TEMPERATURE SENSOR ON-VEHICLE REPAIR

AT00B-05

1. **DISCONNECT ATF TEMPERATURE SENSOR CONNECTOR**
2. **REMOVE ATF TEMPERATURE SENSOR**
 - (a) Remove the ATF temperature sensor.
 - (b) Remove the O-ring from the ATF temperature sensor.
3. **INSTALL ATF TEMPERATURE SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the ATF temperature sensor.
 - (b) Install the ATF temperature sensor.
Torque: 15 N·m (150 kgf-cm, 11 ft-lbf)
4. **CONNECT ATF TEMPERATURE SENSOR CONNECTOR**

NOTICE:

Be careful not to twist the wire harness.