



## INSTALLATION

### 1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

**Correct distance: More than 17.95 mm (0.7067 in.)**

### 2. INSTALL TRANSMISSION

Installation is in the reverse order of removal (See page [AT-23](#) ).

HINT:

- After installation, adjust the shift lever position (See page [DI-159](#) ).
- Fill and check fluid level (See page [DI-159](#) ).