


EXTENSION HOUSING OIL SEAL (A340E)

AT008-06

ON-VEHICLE REPAIR

1. REMOVE PROPELLER SHAFT (See page [PR-4](#))

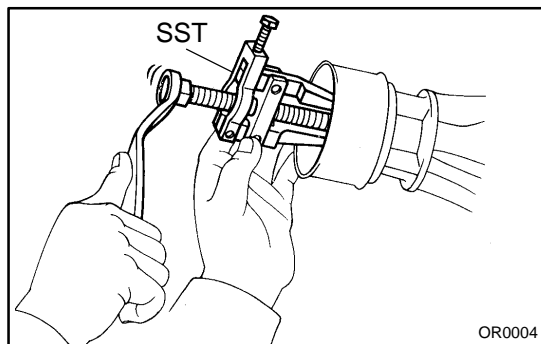


2. REMOVE REAR OIL SEAL

NOTICE:

Clean the extension housing before removing the oil seal.

Using SST, remove the oil seal.

SST 09308-10010

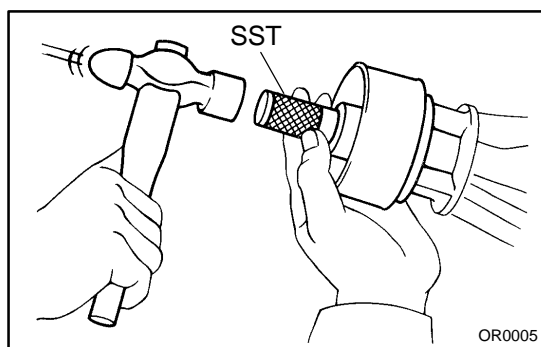

3. INSTALL NEW OIL SEAL

(a) Using SST and a hammer, carefully drive in the oil seal as far as it will go.

(b) Coat the lip of a new oil seal with MP grease.

SST 09325-40010

4. INSTALL PROPELLER SHAFT (See page [PR-6](#))

5. CHECK FLUID LEVEL (See page [DI-159](#))