


ANTENNA REMOVAL

BE07F-02

1. DISCONNECT ANTENNA CABLE


- (a) Remove the radio and disconnect the antenna cable.
- (b) Disconnect the antenna cable from the 4 clamps.

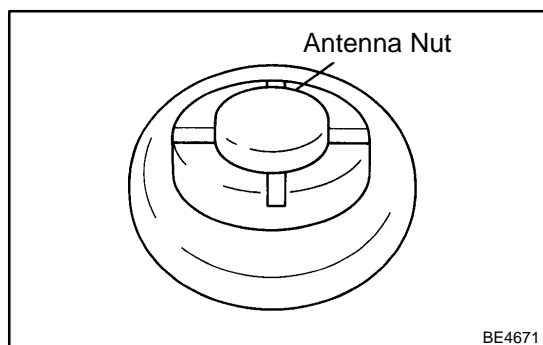

2. REMOVE ANTENNA NUT AND ORNAMENT

3. w/o Wheel Opening Extension: REMOVE FENDER LINER

Remove the clips and fender liner.

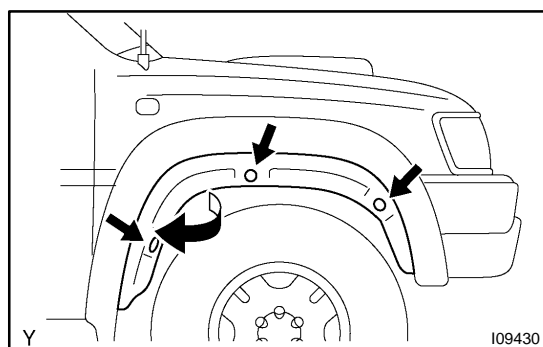


4. w/ Wheel Opening Extension: REMOVE FENDER LINER

- (a) Remove the 3 clips.
- (b) Pull the fender liner.

HINT:

The following operations should be done by 2 persons.

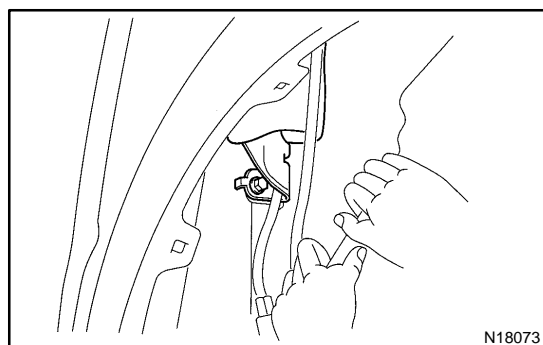

5. REMOVE ANTENNA ASSEMBLY

- (a) Auto Antenna models:
Disconnect the connector.
- (b) Remove the bolt and antenna assembly.