



INSPECTION

1. M/T:
INSPECT BACK-UP LIGHT SWITCH CONTINUITY

Tester connection	Condition	Specified condition
1 - 2	Free	No continuity
	Pushed in	Continuity

If the continuity is not as specified, replace the switch.

2. A/T:
INSPECT PARK/NEUTRAL POSITION SWITCH (See page [DI-203](#))