



INSPECTION

INSPECTION TRANSPONDER KEY COIL CONTINUITY

Check that there is continuity between the terminals.
If the continuity is not as specified, replace the coil.