


INSPECTION

1. INSPECT FOG LIGHT SWITCH CONTINUITY

Tester connection	Condition	Specified condition
-	OFF	No continuity
10 - 11	ON	Continuity

If the continuity is not as specified, replace the switch.

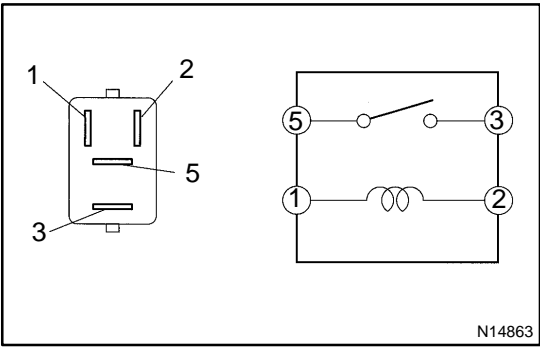

2. INSPECT FOG LIGHT RELAY CONTINUITY

Tester connection	Condition	Specified condition
1 - 2	Constant	Continuity
3 - 5	Apply B+ between terminals 1 and 2	Continuity

If the continuity is not as specified, replace the relay.