


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
-	LOCK	-
2 - 3	ACC	Continuity
2 - 3 - 4	ON	Continuity
6 - 7		
1 - 2 - 4	START	Continuity
6 - 7 - 8		

If the continuity is not as specified, replace the switch.

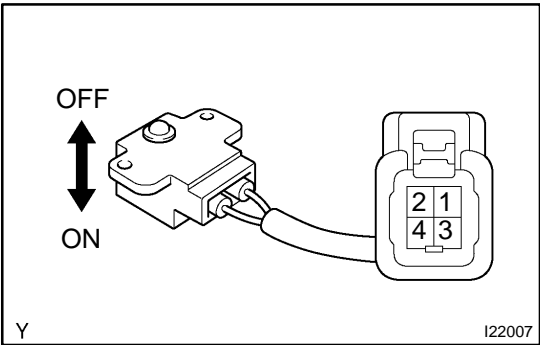

2. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
1 - 2	OFF (Key removed)	No continuity
	ON (Key set)	Continuity

If the continuity is not as specified, replace the switch.