



INSPECTION

1. w/o Cruise Control: INSPECT STOP LIGHT SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
1 - 2	Switch pin free	Continuity
	Switch pin pushed in	No continuity

If the continuity is not as specified, replace the switch.

2. w/ Cruise Control: INSPECT STOP LIGHT SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
1 - 2	Switch pin free	Continuity
	Switch pin pushed in	No continuity
3 - 4	Switch pin free	No continuity
	Switch pin pushed in	Continuity

If the continuity is not as specified, replace the switch.