


INSPECTION

1. INSPECT THEFT DETERRENT INDICATOR OPERATION

Connect the positive (+) lead from the battery to terminal 3 and negative (-) lead to terminal 6, and check that the indicator light lights up.

If the operation is not as specified, replace the integration control panel assembly.

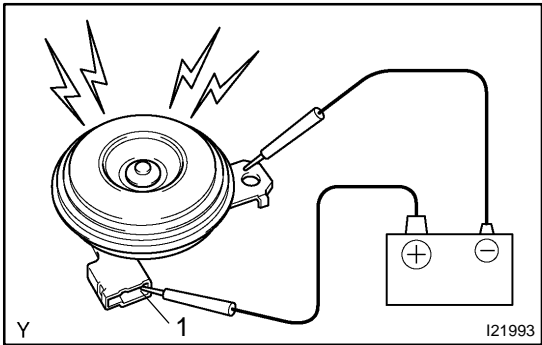


2. INSPECT HORN OPERATION

Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to the horn body, and check that the horn blows.

If the operation is not as specified, replace the horn.

3. INSPECT HORN CIRCUIT (See page [DI-545](#))

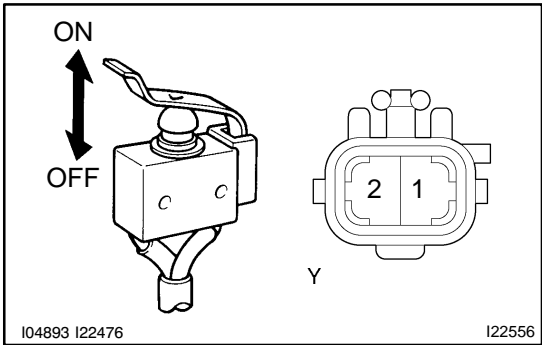

4. INSPECT ENGINE HOOD COURTESY SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
1 - 2	LOCK	No continuity
	UNLOCK	Continuity

If continuity is not as specified, replace the switch.

If continuity is as specified, inspect the switch circuit.

5. INSPECT ENGINE HOOD COURTESY SWITCH CIRCUIT (See page [DI-541](#))