


INSPECTION

1. INSPECT TURN SIGNAL SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
1 - 2	Left turn	Continuity
-	Neutral	No continuity
2 - 3	Right turn	Continuity

If the continuity is not as specified, replace the switch.

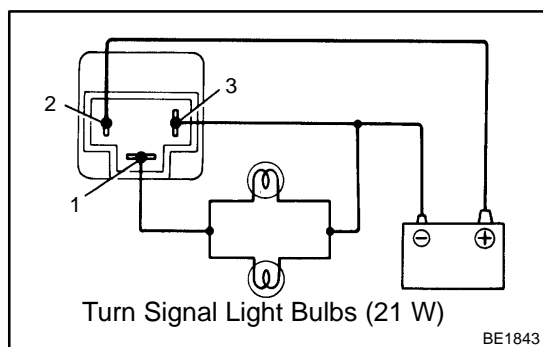


2. INSPECT TURN SIGNAL FLASHER OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3.
- Connect the 2 turn signal light bulbs connected in parallel each other to terminals 1 and 3, then check that the bulbs flash.

HINT:

The turn signal lights should flash 60 to 120 times per minute. If either one of the front or rear turn signal lights has an open circuit, the number of flashes is more than 140 per minute. If the operation is not as specified, replace the flasher.

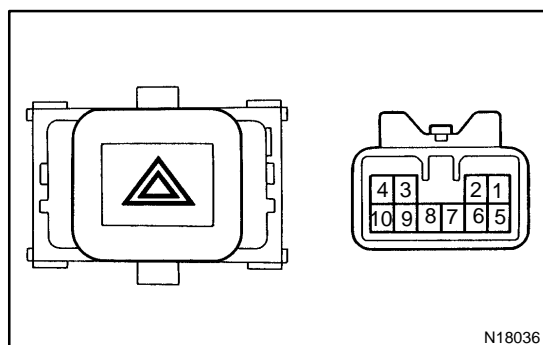

3. INSPECT HAZARD WARNING SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
5 - 7	Switch OFF	Continuity
1 - 2 - 4	Switch ON	Continuity
5 - 6		
8 - 9	Illumination circuit	Continuity

If continuity is not as specified, replace the switch.