


# ADJUSTMENT

## ADJUST WIRELESS DOOR LOCK BUZZER VOLUME

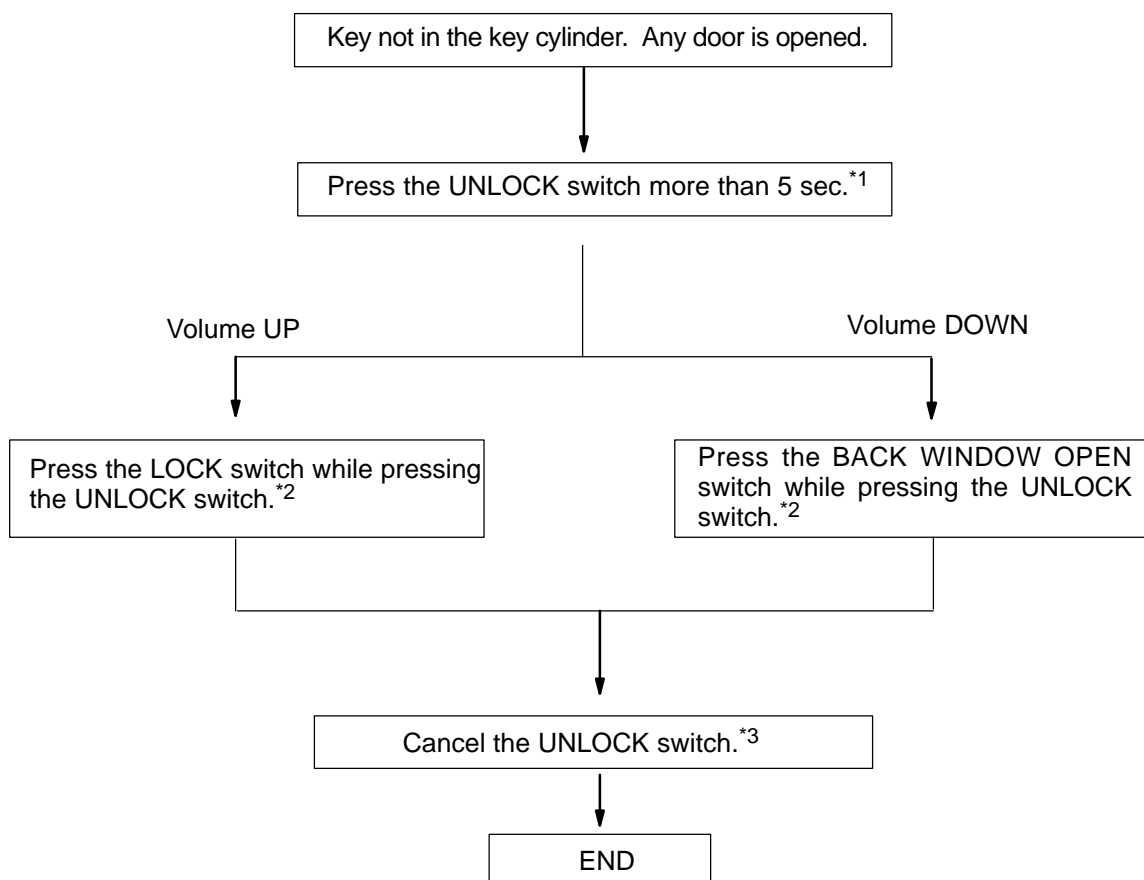

\*1: When the mode is changed to the "Volume adjustment mode", the buzzer sounds 2 times.

\*2: 5 volume level can be set. Initial volume is set to the intermediate level.

\*3: When the mode is changed to the "Normal mode", the buzzer sounds 2 times.

## &lt;REFERENCE&gt;

