


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND LEFT /RIGHT VERTICAL DIRECTIONS

Loosen the body side hinge nuts to adjust.


Torque: 33 N·m (330 kgf·cm, 25 ft·lbf)

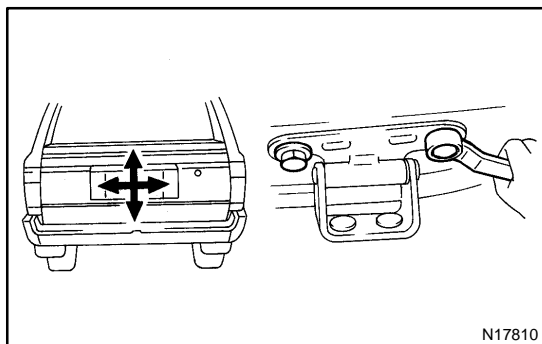

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

Torque: 23 N·m (230 kgf·cm, 17 ft·lbf)

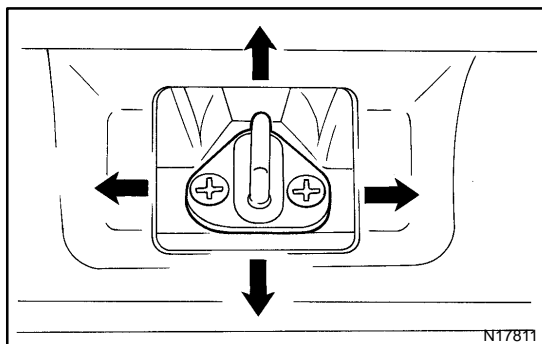

3. ADJUST DOOR LOCK STRIKER

- (a) Loosen the striker mounting screws to adjust.
- (b) Using a plastic hammer, tap the striker to adjust it.