

DISASSEMBLY

1. REMOVE BACK DOOR TRIM

- Remove the assist strap hole cover, bolt and assist strap.
- Using a screwdriver, remove the back door trim.

HINT:


Tape the screwdriver tip before use.

2. REMOVE PLATE

- Remove the 9 screws and plate.
- Disconnect the connector.

3. REMOVE BACK DOOR GLASS RUN

4. REMOVE OUTER WEATHERSTRIP

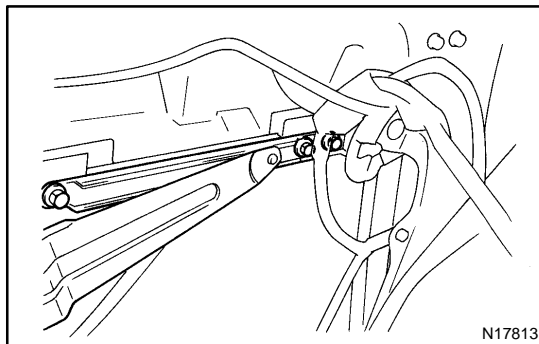

5. REMOVE BACK DOOR GLASS

Remove the 6 bolts and door glass.

NOTICE:

Do not damage the door glass.

6. REMOVE WINDOW REGULATOR


Remove the window regulator mounting bolts.

Torque: 5.0 N·m (50 kgf·cm, 43 in.-lbf)

7. REMOVE LH AND RH BACK DOOR GLASS GUIDE RAIL

Remove the 8 bolts and LH and RH back door glass guide rails.


Torque: 5.0 N·m (50 kgf·cm, 43 in.-lbf)

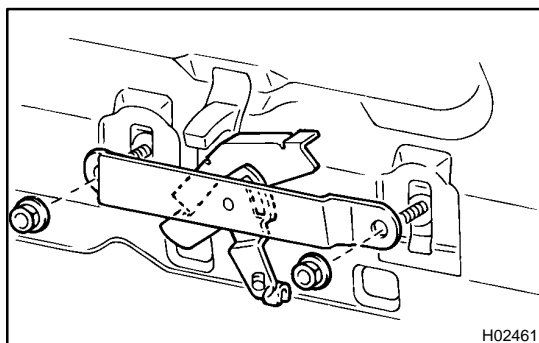

8. REMOVE LOCK CONTROL BELLCRANK

Remove the 2 nuts and lock control bellcrank.

9. REMOVE BACK DOOR REMOTE CONTROL

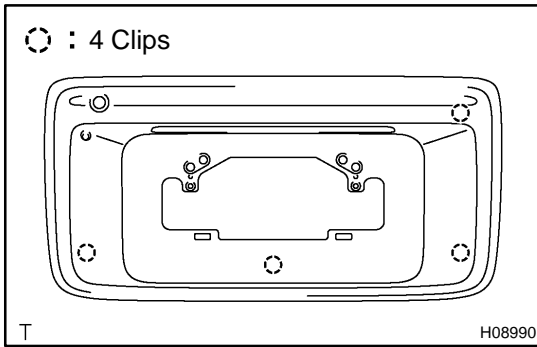**10. REMOVE BACK DOOR GARNISH**

- (a) Remove the nut.
- (b) Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

11. REMOVE BACK DOOR LOCK CYLINDER**12. REMOVE BACK DOOR LOCK**

Remove the 3 bolts and back door lock.

Torque: 7.0 N·m (70 kgf-cm, 61 in.-lbf)