


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Using SST, adjust the door by loosening the body side hinge bolts.

SST 09812-00010

Torque: 23 N·m (230 kgf-cm, 17 ft-lbf)

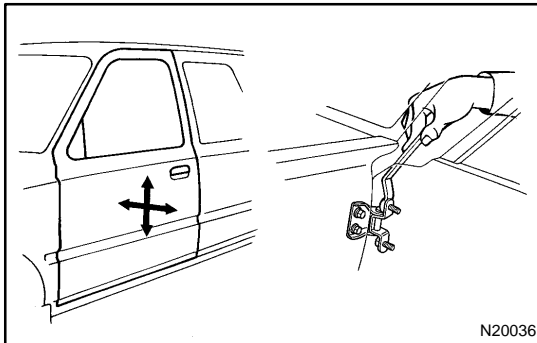


2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

HINT:

Substitute the standard bolt for the centering bolts
(See page [BO-6](#)).

Torque: 23 N·m (230 kgf-cm, 17 ft-lbf)

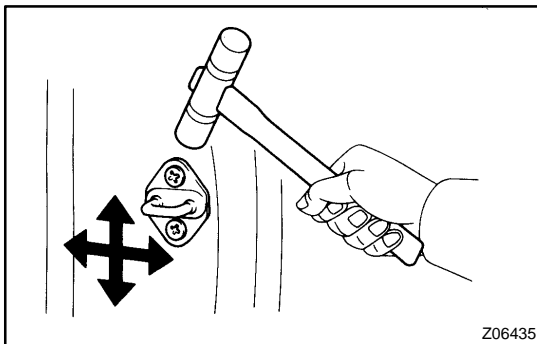

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
- Tighten the striker mounting screws again.

Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)