

INSTALLATION

INSTALL FRONT SEAT

- (a) Mount the seat to the vehicle.
- (b) Connect the connectors.
- (c) Slide the front seat to the rearmost position.
- (d) Tighten the bolts on the front side temporarily, tighten them completely starting from the bolt on the inner side.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

- (e) Slide the seat to the frontmost position to tighten the bolts on the rear side temporarily, from the bolt on the inner side tighten completely.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)