

REMOVAL

REMOVE FRONT SEAT

- (a) Using a screwdriver, remove the seat track covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 bolts.
(c) Disconnect the connectors.
(d) Remove the front seat.

NOTICE:

Be careful not to damage the body.