

DISASSEMBLY

1. REMOVE HEADREST

2. REMOVE RECLINING ADJUSTER RELEASE HANDLE

Remove the screw and reclining adjuster release handle.

3. REMOVE SEAT ADJUSTER KNOB

4. REMOVE OUTER SHIELD

Remove the screw and outer shield.

5. REMOVE INNER SHIELD

Remove the 2 screws and inner shield.

6. REMOVE FRONT SEAT INNER BELT

Remove the nut and front seat inner belt.

7. REMOVE SEATBACK ASSEMBLY

- (a) Disengage the hooks.
- (b) Remove the 4 bolts and seatback assembly.

8. REMOVE SEATBACK COVER

- (a) Remove the headrest supports.
- (b) Remove the seatback frame from the seatback cover with pad.
- (c) Driver's seat:
Using a screwdriver, remove the lumbar support lever.
- (d) Driver's seat:
Remove the 2 bolts and lumbar support assembly from the seatback frame.

- (e) Remove the hog rings.

- (f) Remove the seatback cover from the pad.

9. REMOVE SEAT CUSHION ASSEMBLY

Remove the 4 bolts and seat cushion assembly from the seat adjuster.

10. REMOVE SEAT CUSHION COVER

- (a) Remove the hog rings and seat cushion frame from the seat cushion cover with pad.
- (b) Remove the silencer from the seat cushion frame.
- (c) Remove the hog rings and seat cushion cover from the seat cushion pad.

11. REMOVE RECLINING CONNECTING PIPE

Remove the reclining connecting pipe and 2 silencers.

12. REMOVE EQUALIZING WIRE

13. REMOVE INSIDE INNER SHIELD

Remove the 2 screws and inside inner shield.

14. REMOVE OUTSIDE INNER SHIELD

Remove the 3 screws and outside inner shield.