

## INSTALLATION

### INSTALL FRONT SEAT

- (a) Slide the front seat to the rearmost position.

**NOTICE:**

**Make sure at seat adjuster locks.**

- (b) Without holding the seat track handle, mount the seat to the vehicle.

**HINT:**

If holding the seat track handle, the adjusted rearmost positions slip off.

- (c) Tighten the bolts on the front side temporarily, tighten them completely starting from the bolt on the inner side.

**Torque: 37 N·m ( 375 kgf·cm, 27 ft·lbf)**

- (d) Slide the seat to the frontmost position to tighten the bolts on the rear side temporarily, from the bolt on the inner side tighten completely.

**Torque: 37 N·m ( 375 kgf·cm, 27 ft·lbf)**