


INSTALLATION

1. INSTALL WINDOW WASHER NOZZLES

2. INSTALL WIPER LINK

Install the wiper link with the 6 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

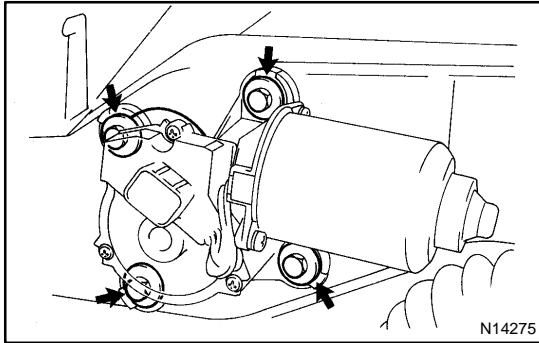

3. INSTALL WIPER MOTOR

Install the wiper motor and fasten the 4 bolts.


Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

4. INSTALL COWL LOUVER

Install the cowl louver with the 6 screws and 4 clips.

5. INSTALL WIPER ARMS

- (a) Operate the wipers once and turn the wiper switch OFF.
- (b) Install the wiper arms and tighten the 2 nuts by hand.

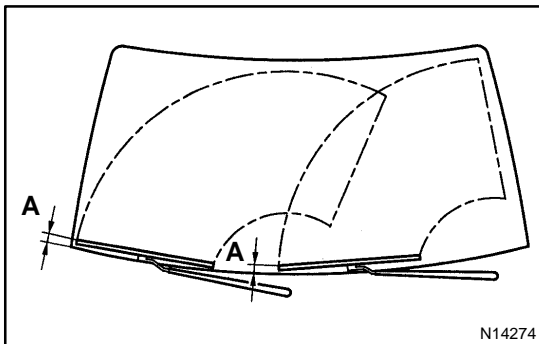

- (c) Adjust the installation positions of the wiper arms to the positions shown in the illustration.

A: Approx. 25 mm (0.98 in.)

- (d) Torque the 2 nuts.

Torque: 20 N·m (205 kgf·cm, 15 ft-lbf)

- (e) Install the 2 caps.