


REMOVAL

1. REMOVE WIPER ARMS

Remove the 2 caps, 2 nuts and wiper arms.

2. REMOVE COWL LOUVER

Remove the 6 screws, 4 clips and cowl louver.

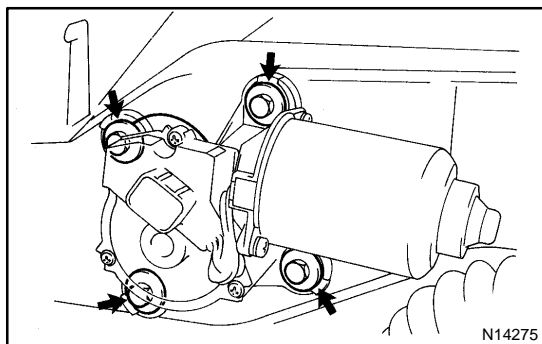

3. REMOVE WIPER MOTOR

Unfasten the 4 bolts and wiper motor.

4. REMOVE WIPER LINK

Remove the 6 bolts and wiper link.

5. REMOVE WINDOW WASHER NOZZLES