

DISASSEMBLY

1. REMOVE NO. 5 HEATER TO REGISTER DUCT

Remove the screw and No. 5 heater to register duct.

2. REMOVE NO. 1 REGISTER

Remove the 2 screws and No. 1 register.

3. REMOVE NO. 2 REGISTER

Remove the 2 screws and No. 2 register.

4. REMOVE LOWER PANEL LH AND RH

5. REMOVE CENTER BRACKET

Remove the screw and center bracket.


6. Except 4WD A/T:

REMOVE UPPER CONSOLE BOX MOUNTING BRACKET

Remove the 2 screws and upper console box mounting bracket.

7. REMOVE REAR CONSOLE BOX MOUNTING BRACKET

Remove the 2 bolts and rear console box mounting bracket.

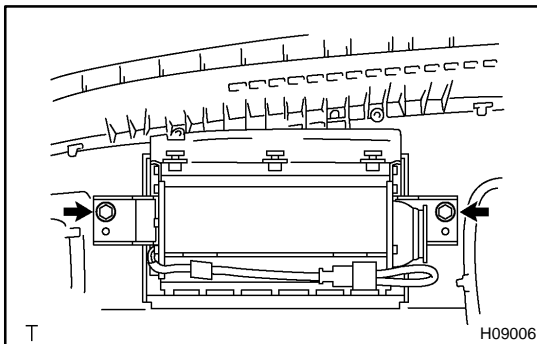


8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

(a) Remove the 2 bolts and front passenger airbag assembly.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

(b) Remove the 2 screws.

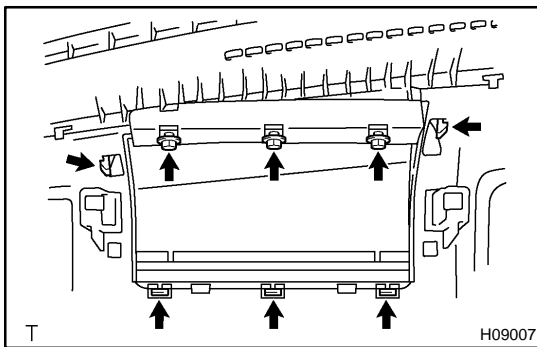

(c) Remove the 3 bolts and instrument panel stay, and pry up the 5 clips shown in the illustration, then remove the airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing down.
- Never disassemble the front passenger airbag assembly.


At the time of reassembly, please refer to the following items.

- Insert the 7 claws of the passenger airbag assembly into the holes in the airbag door securely.
- Make sure that no foreign objects are trapped between the airbag door and bag, and within the module.

NOTICE:

At the time of reassembly, please refer to the following items.

- Make sure that the front passenger airbag assembly is installed to the specified torque.

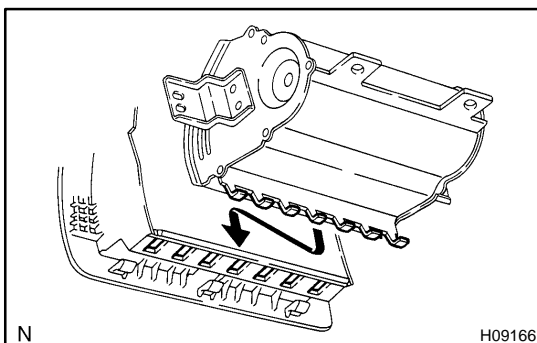

- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.