

DISASSEMBLY

1. REMOVE HEADREST
2. REMOVE SEATBACK LOCK KNOB
3. REMOVE CRS ANCHOR COVER
4. REMOVE SEATBACK LOCK KNOB COVER
5. REMOVE HEADREST SUPPORTS
6. REMOVE SEATBACK COVER

- (a) Remove the hog rings and seatback frame from the seatback cover with pad.
- (b) Remove the 2 bolts and seatback lock control from the seatback frame.
- (c) Remove the hog rings and seatback cover from the seatback pad.

7. REMOVE REAR SEAT CUSHION HOLDER

Remove the screw and rear seat cushion holder.

8. REMOVE SEAT CUSHION COVER

- (a) Remove the seat cushion cover with pad.
- (b) Remove the hog rings and seat cushion cover from the seat cushion pad.
- (c) Remove the 2 headrest holders from the seat cushion frame.
- (d) Using a clip remover, remove the clips and seat cushion under cover from the seat cushion frame.