

INSTALLATION

1. INSTALL SEATBACK CENTER HINGE

Install the seatback center hinge with the 4 bolts to the body.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

2. INSTALL SEATBACK OUTER HINGE

Install the seatback outer hinge with the 2 bolts to the body.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. INSTALL SEATBACK ASSEMBLY

(a) Install the seatback assembly with the 3 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(b) Install the rear floor carpet to seatback assembly.

4. INSTALL SEAT CUSHION ASSEMBLY

(a) Install the seat cushion assembly with the 2 bolts to the body.

(b) Install the rear seat hinge covers.