

REASSEMBLY

1. INSTALL SEAT CUSHION COVER

- (a) Install the seat cushion under cover with the clips to the seat cushion frame.
- (b) Install the 2 headrest holders to the seat cushion frame.
- (c) Install the seat cushion cover with new hog rings to the seat cushion pad.
- (d) Install the seat cushion cover with pad.

2. INSTALL REAR SEAT CUSHION HOLDER

Install the rear seat cushion holder with the screw.

3. INSTALL SEATBACK COVER

- (a) Install seatback cover with new hog rings to the seatback pad.
- (b) Install the seatback lock control with the 2 bolts to the seatback frame.
- (c) Install the seatback frame with new hog rings to the seatback cover with pad.

4. INSTALL HEADREST SUPPORTS

5. INSTALL CRS ANCHOR COVER

6. INSTALL SEATBACK LOCK KNOB COVER

7. INSTALL SEATBACK LOCK KNOB

8. INSTALL HEADREST