

## REMOVAL

### 1. REMOVE SEAT CUSHION ASSEMBLY

- (a) Using a screwdriver, remove the rear seat hinge covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 bolts and seat cushion assembly.

### 2. REMOVE SEATBACK ASSEMBLY

- (a) Insert a screwdriver between the seatback assembly and rear floor carpet to remove the rear floor carpet.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 3 bolts and release the seatback lock to remove the seatback assembly.

- (c) Remove the seatback assembly.

### 3. REMOVE SEATBACK OUTER HINGE

Remove the 2 bolts and seatback outer hinge.

### 4. REMOVE SEATBACK CENTER HINGE

Remove the 4 bolts and seatback center hinge.