

DISASSEMBLY

1. REMOVE OUTER SHIELD RH

Remove the screw and outer shield RH.

2. REMOVE OUTER SHIELD LH

Remove the screw and outer shield LH.

3. REMOVE SEATBACK ASSEMBLY

(a) Remove the 2 screws and arm covers.

(b) Remove the 4 bolts and seatback assembly.

4. REMOVE SEATBACK COVER

(a) Remove the seatback board.

(b) Remove the hog rings.

(c) Zip the seatback cover open to remove the seatback cover.

5. REMOVE SEATBACK PAD

Remove the seatback pad from the seatback frame.

6. REMOVE RECLINING ADJUSTER RH AND LH

Remove the 8 bolts, reclining adjuster RH and LH.

7. REMOVE RECLINING CONNECTING PIPE

8. REMOVE SEAT CUSHION COVER

Remove the hog rings and seat cushion cover.

9. REMOVE SEAT CUSHION PAD

Remove the seat cushion pad from the seat cushion frame.

10. REMOVE SEAT LOCK COVER

11. REMOVE REAR NO. 2 SEAT LAP BELT

Remove the bolt and rear No. 2 seat lap belt

12. REMOVE SEAT LOCK ASSEMBLY