

INSPECTION

INSPECT RECLINING LOCK POSITION SLIPPING OFF

When reclining the seat, inspect that the reclining adjuster RH and LH are released at the same time.

HINT:

When the reclining lock positions slip off, disassemble the seat to adjust the position.