


REMOVAL

1. REMOVE NO. 2 ROOM LIGHT

- Remove the room light cover, 4 screws and No. 2 room light.
- Disconnect the connector.

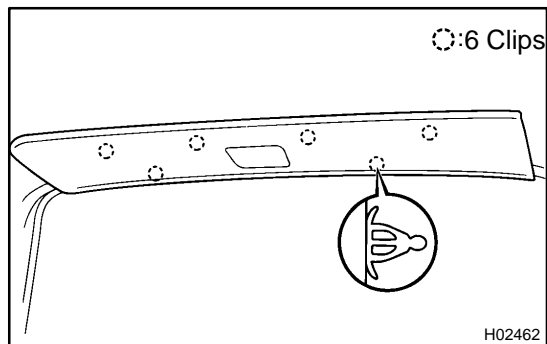

2. REMOVE REAR HEADER TRIM

Using a screwdriver, remove the rear header trim.

HINT:


Tape the screwdriver tip before use.

3. REMOVE BACK DOOR SCUFF PLATE

Remove the 5 screws and back door scuff plate.

4. REMOVE REAR DOOR SCUFF PLATES

Remove the 4 screws and rear door scuff plates.

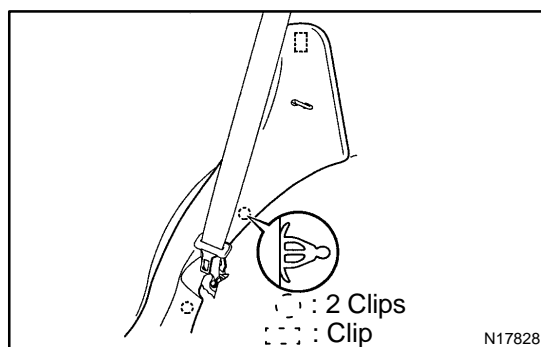


5. REMOVE REAR SEAT SIDE GARNISH

- Using a screwdriver, remove the rear seat side garnish.

HINT:

Tape the screwdriver tip before use.

- Employ the same manner described above to the other side.

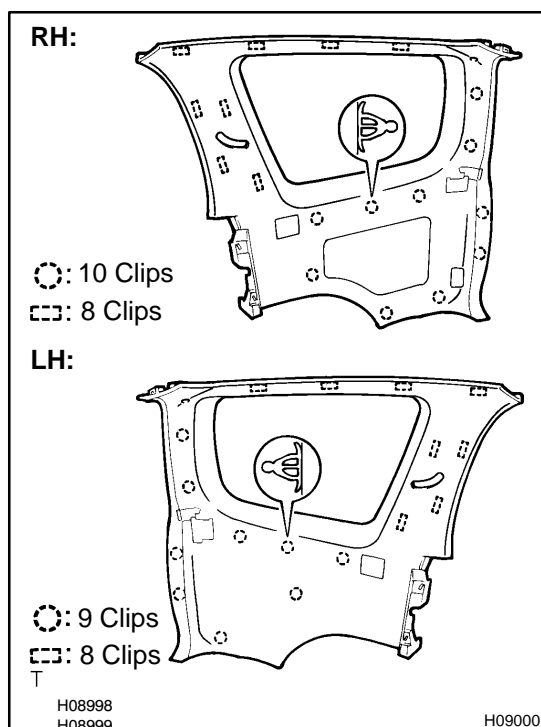

6. REMOVE DECK SIDE TRIM

- RH:

Using a screwdriver, remove the D/C outlet bezel, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

- w/ Tonneau cover:
Remove the tonneau cover.
- w/ Tonneau cover:
Remove the 2 screws and tonneau cover holder.
- w/ Tonneau cover:
Remove the screw and tonneau cover hook.
- Remove the screw.
- Remove the rear No. 1 seat outer belt floor anchor.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
- Remove the rear No. 2 seat outer belt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
- Insert a screwdriver between the trim and door panel to remove the trim, then disconnect the connector.


HINT:

Tape the screwdriver tip before use.

- (i) Remove the deck side trim with the rear No. 1 and No. 2 seat belts passed through its hole.
- (j) Employ the same manner described above to the other side.

7. REMOVE FRONT DOOR SCUFF PLATES

Remove the 8 screws and front door scuff plates.

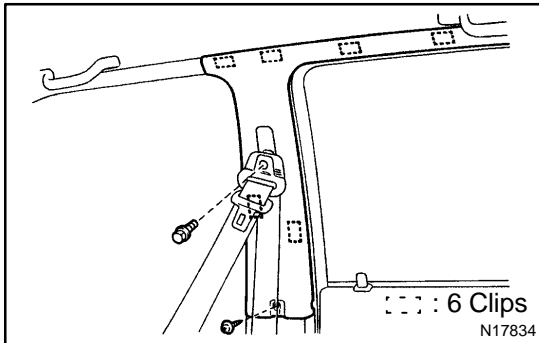8. REMOVE CENTER PILLAR LOWER GARNISHES**9. REMOVE CENTER PILLAR UPPER GARNISH**

- (a) Remove the front seat belt shoulder anchors.


Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

- (b) Remove the screw.
- (c) Using a screwdriver, remove the center pillar upper garnish.

HINT:

Tape the screwdriver tip before use.

- (d) Employ the same manner described above to the other side.

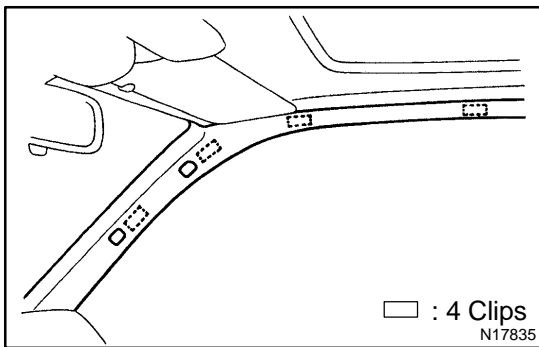10. REMOVE ASSIST GRIPS**11. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.


12. REMOVE ROOM LIGHT LENS AND MAP LIGHT ASSEMBLY

- (a) Remove the room light lens, screw and map light assembly.
- (b) Disconnect the connector.

13. REMOVE INNER REAR VIEW MIRROR

Remove the 3 screws and inner rear view mirror.

14. REMOVE NO. 1 ROOM LIGHT**15. REMOVE SUN VISORS AND HOLDERS**

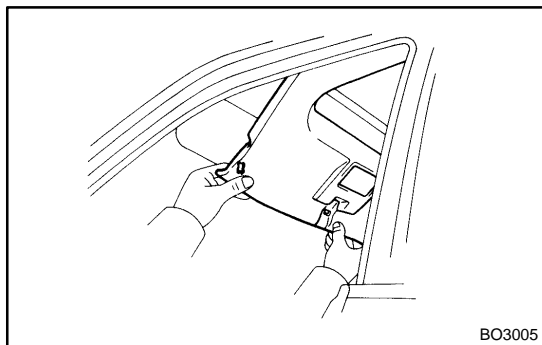**16. REMOVE ROOF HEADLINING**

Remove the 6 clips and roof headlining.

NOTICE:

Do not damage the roof headlining.