



REMOVAL

1. REMOVE BACK DOOR TRIM

- (a) Remove the assist strap hole cover, bolt and assist strap.
- (b) Using a screwdriver, remove the back door trim.

HINT:

Tape the screwdriver tip before use.

2. REMOVE PLATE

- (a) Remove the 9 screws and plate.
- (b) Disconnect the connector.

3. REMOVE BACK DOOR GLASS RUN

4. REMOVE OUTER WEATHERSTRIP

5. REMOVE BACK DOOR GLASS

Remove the 6 bolts and door glass.

6. REMOVE REAR WIPER ARM

Remove the nut, wiper arm and washer with packing.

7. REMOVE REAR WIPER MOTOR ASSEMBLY

- (a) Disconnect the connector.
- (b) Unfasten the 3 wiper motor set bolts, and remove the wiper motor assembly.

8. REMOVE WASHER NOZZLE