

INSTALLATION

NOTICE:

- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed to the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.


1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the retractor of front seat outer belt with the 2 bolts.

Torque:

Upper bolt: 8.5 N·m (85 kgf·cm, 74 in.-lbf)


Lower bolt: 42 N·m (430 kgf·cm, 31 ft-lbf)

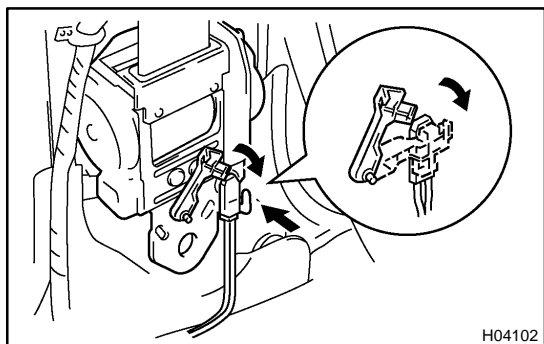

- (b) Connect the pretensioner connector as shown in the illustration.

- (c) Install the front seat outer belt shoulder anchor with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft-lbf)

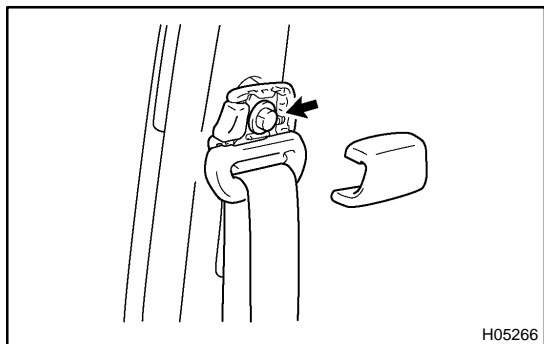

- (d) Install the anchor cover.

- (e) Install the front seat outer belt floor anchor with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft-lbf)

2. INSTALL CENTER PILLAR LOWER GARNISH

3. INSTALL REAR DOOR SCUFF PLATE

Install the rear door scuff plate with the 2 screws.

4. INSTALL FRONT DOOR SCUFF PLATE

Install the front door scuff plate with the 4 screws.