

SEAT BELT PRETENSIONER REMOVAL

B021P-02

NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

1. REMOVE FRONT DOOR SCUFF PLATE

Remove the 4 screws and front door scuff plate.

2. REMOVE REAR DOOR SCUFF PLATE

Remove the 2 screws and rear door scuff plate.

3. REMOVE CENTER PILLAR LOWER GARNISH

4. REMOVE FRONT SEAT OUTER BELT


CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

- (a) Remove the bolt and front seat outer belt floor anchor.

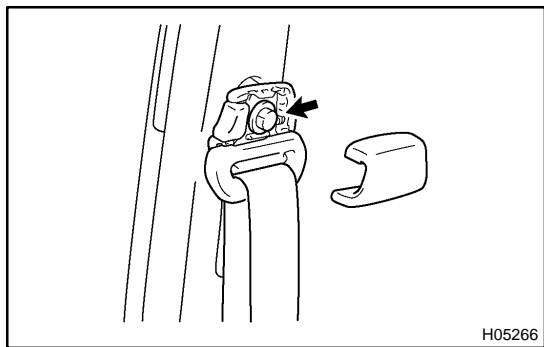


- (b) Using a screwdriver, remove the anchor cover.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the bolt and front seat outer belt shoulder anchor.

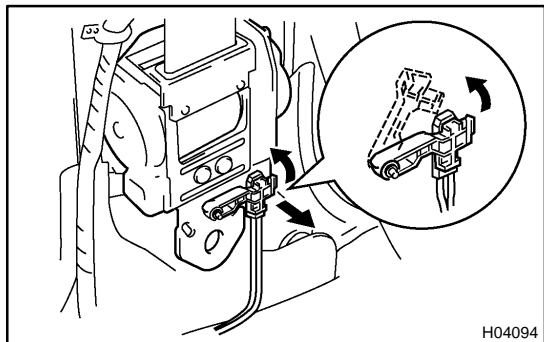

- (d) Disconnect the pretensioner connector as shown in the illustration.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

- (e) Remove the 2 bolts and front seat outer belt.