



SLIDING ROOF ON-VEHICLE INSPECTION

BO0CJ-02

INSPECT SLIDING ROOF GLASS ALIGNMENT

- (a) Start the engine and check the operation time of the sliding roof.

Operation time: Approx. 5 sec.

- (b) Check for abnormal noise or binding during operation.
(c) With the sliding roof fully closed, check for water leakage.
(d) Check for a difference in level between the sliding roof weatherstrip and roof panel.

Front end: 0 ± 1.5 mm (0 ± 0.059 in.)

Rear end: 0 ± 1.5 mm (0 ± 0.059 in.)