

INSTALLATION

1. INSTALL QUARTER WHEEL OPENING MOULDING

Install the quarter wheel opening moulding with the 6 screws.

Torque:5.0 N·m (50 kgf·cm, 43 in.-lbf)

2. REMOVE FRONT FENDER WHEEL OPENING MOULDING

Install the front fender wheel opening moulding with the 5 screws.

Torque:5.0 N·m (50 kgf·cm, 43 in.-lbf)