

REMOVAL

1. REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the 5 screws.
- (b) Remove the front fender wheel opening moulding.

2. REMOVE QUARTER WHEEL OPENING MOULDING

- (a) Remove the 6 screws.
- (b) Remove the quarter wheel opening moulding.