

REMOVAL

1. REMOVE ROOM LIGHT LENS AND MAP LIGHT ASSEMBLY


- (a) Remove the room light lens, screw and map light assembly.
- (b) Disconnect the connector.

2. REMOVE INNER REAR VIEW MIRROR

Remove the 3 screws and inner rear view mirror.

3. REMOVE SUN VISORS AND HOLDERS

4. REMOVE ASSIST GRIPS

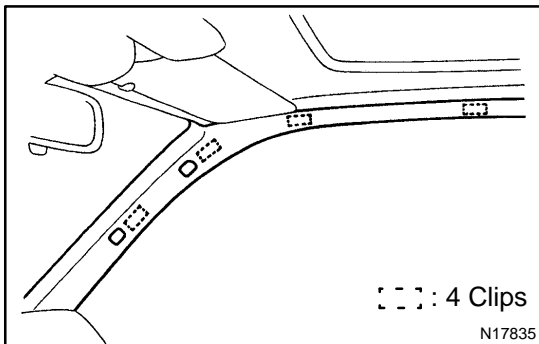

5. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.


6. REMOVE WIPER ARMS

Remove the 2 caps, 2 nuts and wiper arms.

7. REMOVE COWL LOUVER

Remove the 6 screws, 4 clips and cowl louver.

8. REMOVE WEATHERSTRIP AND PROTECTOR

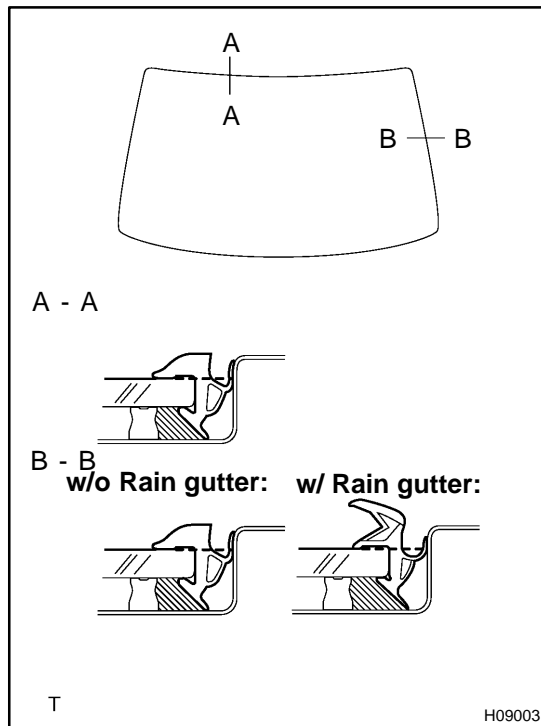


9. REMOVE WINDSHIELD OUTSIDE UPPER MOULDING

- (a) Using a knife, cut off the moulding, as shown in the illustration.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

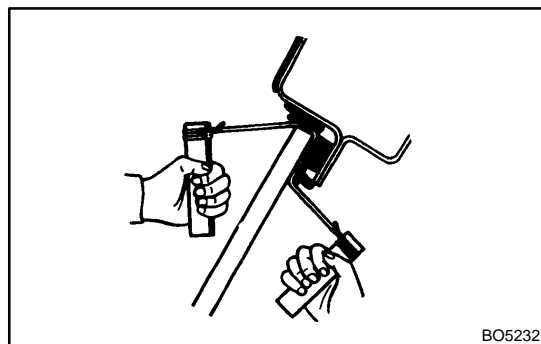

10. REMOVE WINDSHIELD GLASS


- (a) Push piano wire through between the body and glass from the interior.
- (b) Tie both wire ends to a wooden block or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from the being scratched.

NOTICE:

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

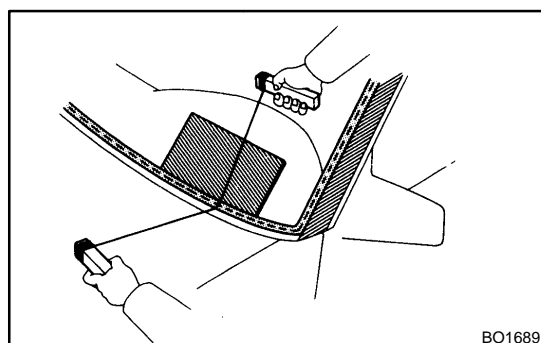

- (c) Cut the adhesive by pulling the piano wire around it.
- (d) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.