


R13540

DISASSEMBLY

1. REMOVE CYLINDER BOOT SET RINGS AND BOOTS


Using a screwdriver, remove the 4 cylinder boot set rings and boots.

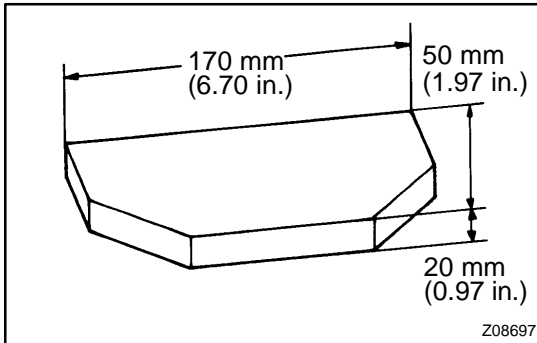

Z08697

2. REMOVE PISTONS FROM CYLINDER

(a) Prepare the wooden plate to hold the pistons.

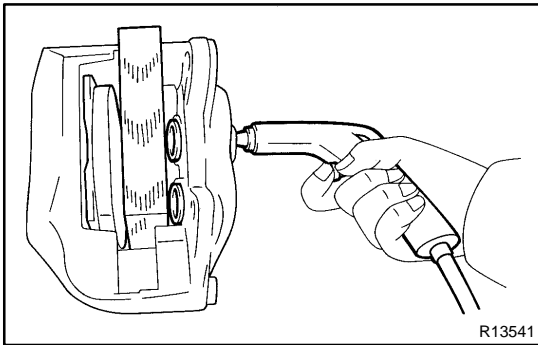


R13541

(b) Place the plate between the pistons and insert a pad at one side.

(c) Use compressed air to remove the pistons alternately from the cylinder.

CAUTION:

Do not place your fingers in front of the pistons when using compressed air.

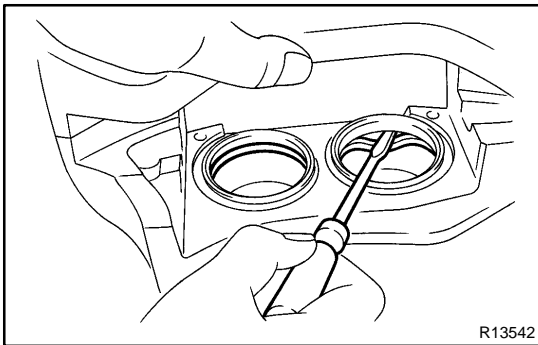

R13542

3. REMOVE PISTON SEALS

Using a screwdriver, remove the 4 piston seals from the cylinder.