


REMOVAL

1. REMOVE FRONT WHEEL

Remove the front wheel and temporarily fasten the disc with hub nuts.

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

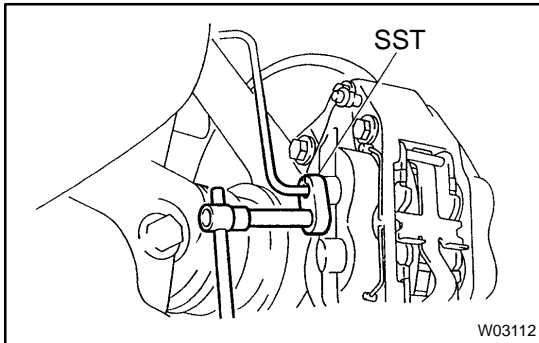


2. DISCONNECT BRAKE LINE

Using SST, disconnect the brake line. Use a container to catch the brake fluid.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

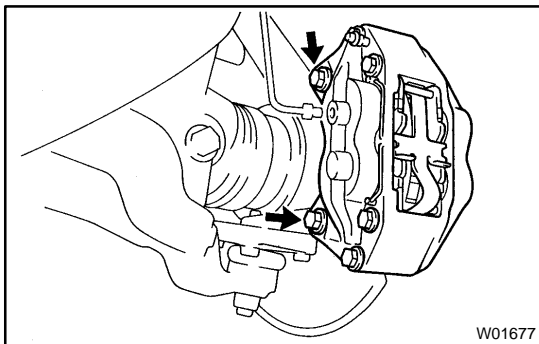

3. REMOVE CALIPER

Remove the 2 mounting bolts and caliper.

Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

4. REMOVE CLIP, 2 PINS, ANTI-RATTLE SPRING AND 2 PADS WITH 4 ANTI-SQUEAL SHIMS