

REMOVAL

REMOVE SPEED SENSOR

- (a) Disconnect the speed sensor connector.
- (b) Remove the 4 resin clips and 3 clamp bolts holding the sensor harness from the steering knuckle, upper arm and side rail.


Torque:

Steering knuckle and upper arm:

8.0 N·m (82 kgf·cm, 71 in.-lbf)

Side rail:

12 N·m (122 kgf·cm, 9 ft·lbf)

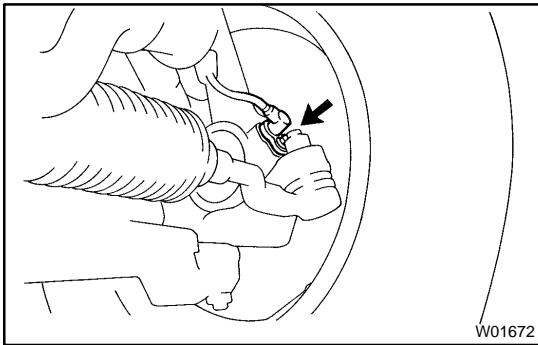

- (c) Remove the speed sensor installation bolt from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)