


## INSTALLATION

Installation is in the reverse order of removal (See page [BR-22](#) ).


### NOTICE:

Apply lithium soap base glycol grease and high temperature grease to the parts indicated by the arrows (See page [BR-21](#) ).

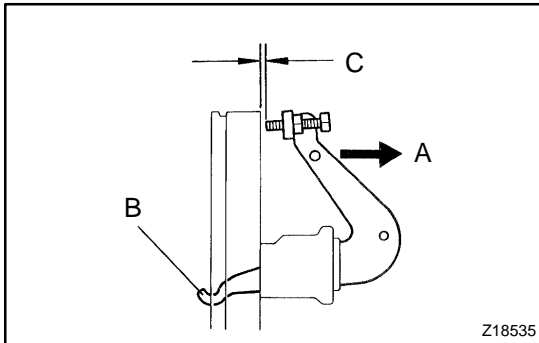


### 1. ADJUST BELLCRANK

- Lightly pull the bellcrank in direction "A" until there is no slack at part "B".
- In this condition, turn the adjusting bolt so that dimension "C" will be 0.4 - 0.8 mm (0.016 - 0.031 in.).
- Lock the adjusting bolt with the lock nut.
- Connect the parking brake cable to the parking brake bellcrank and install the clip.
- Install the 2 tension springs.

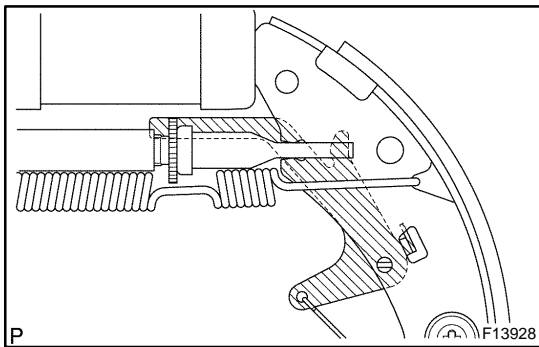

### 2. CHECK AUTOMATIC ADJUSTING LEVER

Check that the automatic adjusting lever is properly installed. If it is not correct, check for incorrect installation of the rear brakes.

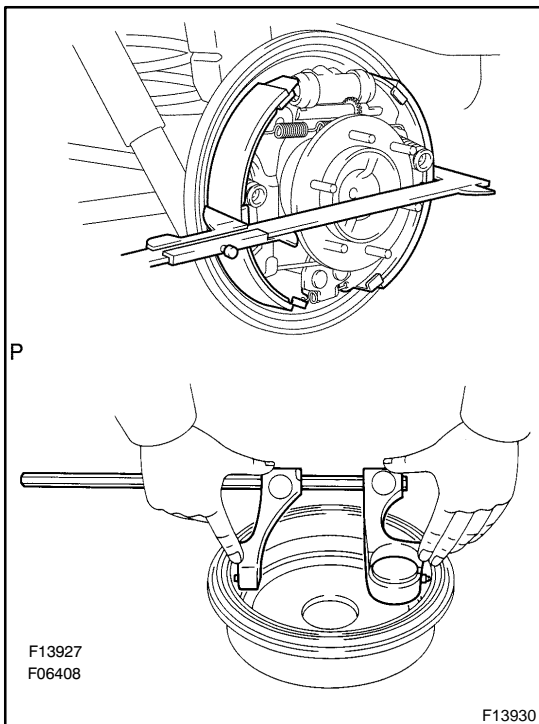

### 3. CHECK CLEARANCE BETWEEN BRAKE SHOES AND DRUM

- Remove the drum.
- Measure the brake drum inside diameter and diameter of the brake shoes. Check that the difference between the diameters is the correct shoe clearance.

**Shoe clearance: 0.5 mm (0.020 in.)**

If it is incorrect, check the parking brake system.

### 4. FILL BRAKE RESERVOIR WITH BRAKE FLUID

### 5. BLEED BRAKE SYSTEM (See page [BR-4](#) )

### 6. CHECK FOR LEAKS