

INSTALLATION

Installation is in the reverse order of removal (See page [BR-50](#)).

NOTICE:

Make sure that

- There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.
- The sensor is installed flat against the knuckle when you tighten the bolt.

HINT:

After installation, check the speed sensor signal (See page [DI-224](#)).