


## REMOVAL

### REMOVE SPEED SENSOR

- (a) Disconnect the speed sensor connector, and pull out the sensor wire harness with grommet.
- (b) Remove the 5 resin clips, holding the sensor wire harness from the frame, upper control arm and axle housing.

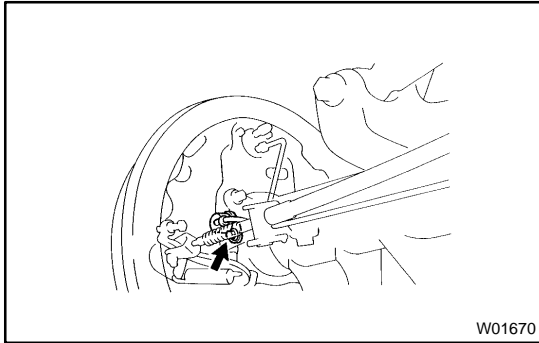

- (c) Remove the mounting bolt and speed sensor.

**Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)**