


REMOVAL

1. DISCONNECT WIRING FROM GENERATOR

- Disconnect the connector from the generator.
- Remove the nut and disconnect the wire from the generator.

2. REMOVE GENERATOR DRIVE BELT

Loosen the adjust lock nut, adjusting bolt and pivot bolt, and remove the drive belt.

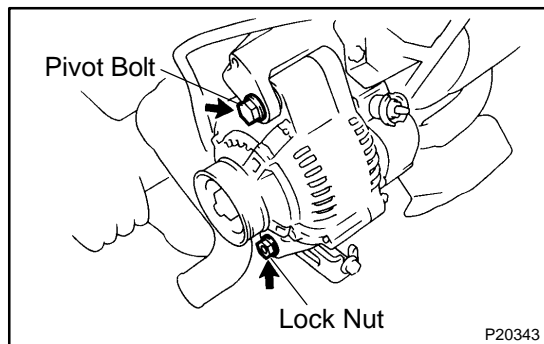

3. REMOVE GENERATOR

- Remove the pivot bolt and adjusting lock nut.
- Remove the generator.

Torque:

Pivot bolt: 51 N·m (520kgf·cm, 38 ft·lbf)

Lock Nut: 18.5 N·m (189kgf·cm, 25 ft·lbf)