


REMOVAL

1. DRAIN ENGINE COOLANT

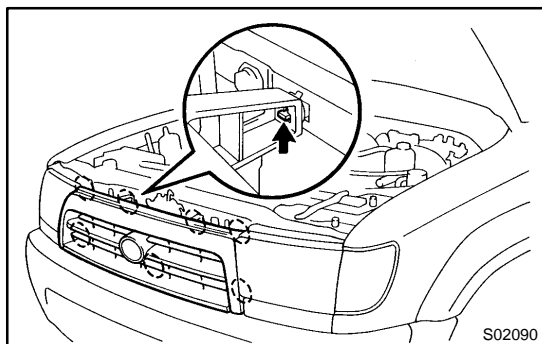

2. REMOVE RADIATOR GRILLE

Remove the 7 clips and radiator grille.

3. DISCONNECT UPPER RADIATOR HOSE

4. DISCONNECT RADIATOR RESERVOIR HOSE

5. DISCONNECT LOWER RADIATOR HOSE

6. REMOVE RADIATOR NO.2 FAN SHROUD

7. A/T:

DISCONNECT OIL COOLER HOSES

8. REMOVE RADIATOR

Remove the 4 bolts and the radiator.