

## INSPECTION

### INSPECT THERMOSTAT

#### HINT:


Thermostat is numbered according to the valve opening temperature.

- (a) Immerse the thermostat in water and heat the water gradually.
- (b) Check the valve opening temperature and valve lift.

**Valve opening temperature: 80 - 84°C (176 - 183°F)**

**Valve lift: 8.5 mm (0.335 in.) or more at 95°C (203°F)**

If the valve opening temperature and valve lift are not within specifications, replace the thermostat.

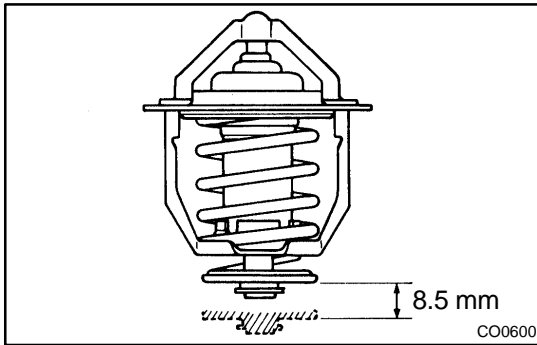

- (c) Check that the valve is fully closed when the thermostat is at low temperatures (below 40°C (104°F)).

If it is not tight, replace the thermostat.