



## REMOVAL

1. **DRAIN ENGINE COOLANT**
2. **DISCONNECT LOWER RADIATOR HOSE**
3. **REMOVE THERMOSTAT**
  - (a) Remove the 3 nuts, wire clamp, water inlet and thermostat with gasket from the water pump.
  - (b) Remove the gasket from the thermostat.