



REMOVAL

1. REMOVE TIMING BELT (See page [EM-13](#))
2. REMOVE WATER INLET AND THERMOSTAT
3. DISCONNECT NO.2 OIL COOLER HOSE FROM WATER PUMP
4. REMOVE WATER PUMP