

<b>DTC</b>	<b>C1201 / 51</b>	<b>Engine Control System Malfunction</b>
------------	-------------------	--

## CIRCUIT DESCRIPTION

If trouble occurs in the engine control system, the ECU prohibits TRAC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 / 51	Conditions 1. and 2. continue for 5 sec.: 1. Engine speed: 500 rpm or more. 2. A trouble signal in the engine control system is input.	Engine control system

## INSPECTION PROCEDURE

<b>1</b>	<b>Check DTC for engine.</b>
----------	------------------------------

\*1

**Repair engine control system according to the output code.**

\*2

**Check for ECM connected to malfunction indicator light.**

\*1: Output NG code

\*2: Malfunction indicator light remains ON