

<b>DTC</b>	<b>C1223 / 43</b>	<b>ABS Control System Malfunction</b>
------------	-------------------	---------------------------------------

## CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1223 / 43	ABS control system is abnormal.	ABS control system

## INSPECTION PROCEDURE

<b>1</b>	<b>Check DTC for ABS (See page <a href="#">DI-224</a> ).</b>
----------	--

\*1

**Repair ABS control system according to the code output.**

\*2

**Check ECU connected to malfunction indicator light.**

\*1: Output NG code

\*2: Malfunction indicator light remains ON